

Contents



Tablet and charging cable



Tripod and tablet holder



Microphone and charging cable



Microphone holder and lanyard




Velcro strap



Microphone case and spare tripod screws

Step 1: Setting up the tripod

1. Loosen the lower screw and pull out the legs (you might have to pull 2 legs at the same time)
2. Once the legs are extended to the desired distance, tighten the screw (the wider the legs are extended the greater stability the tripod will have)
3. Open the clips to extend the central pole, then close at the desired height
4. The holder is stored at a 90° angle in the case, it needs to be upright so you can place the tablet in a landscape orientation. You can do this by loosening the top screw, lifting up the holder and then tightening

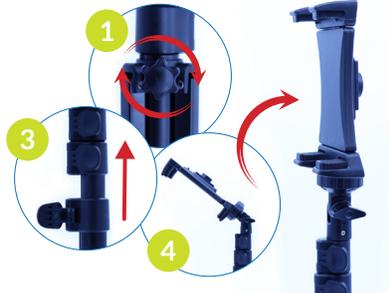


Step 2: Connecting to the microphone

If you have previously paired your device to the microphone, follow the steps below.

1. Make sure Bluetooth is turned on on your tablet
2. Press and hold the microphone button for 3 seconds to turn the microphone on
3. The microphone will automatically connect and show a blue flash every 5 seconds
4. The tablet will now show the status as 'Connected' on the Bluetooth menu

If the microphone hasn't paired, you may need to follow Step 4 from the [Pairing the microphone guide](#) on the right.

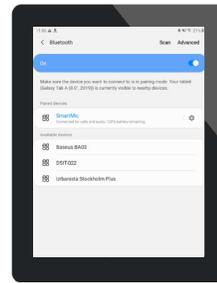

Step 3: Attaching the tablet on the tripod

Pull up the top of the holder to extend it, allowing space for the tablet to sit in a landscape orientation.

Make sure the tablet is held securely in the holder before moving the tripod.



Step 4: Final setup and recording

1. Place the tripod either on the floor or on a desk or shelf, extending or decreasing the central pole to the desired height
2. If the tripod is somewhere where it might get knocked or if it's extended quite high, we recommend using the velcro strap included in the kit to secure it to a table leg or similar
3. Clip the microphone to your clothing or use the lanyard and holder provided
4. Launch the IRIS Connect Record app on your device and follow the on-screen instructions



Step 5: After recording

1. Make sure your reflection has completed uploading before closing the app
2. Power off then charge the microphone and tablet before returning them to the case (to turn off the microphone, press the button for 3 seconds until you see a purple light, then release)
3. Lower the holder to a 90° angle and collapse the tripod so it fits back in the case

Pairing the microphone

1. When pairing for the first time make sure the distance between the tablet and microphone is less than 1 metre
2. Turn on the microphone by pressing and holding the button for 3 seconds until the indicator light shows a purple light, then release
3. Navigate to your tablet's Bluetooth settings menu
4. Turn on Bluetooth and select **SmartMic** from the list of available Bluetooth devices
5. The tablet will now show the status as 'Connected' on the Bluetooth menu

Indicator light guide

- Blue flashing - pairing mode
 - Blue flash every 5 seconds - paired
 - Solid Purple - powering on/off
 - Solid red - low battery
- ### Charging
- Solid red - charging
 - Solid green - fully charged

Battery level guide

To check the battery level of the microphone, review the icon on the device its paired to, which indicates the remaining battery charge.

Android



If you have any questions, just contact our support team.

For more information on how to set up and use your IRIS Connect system, please visit the [User Training Group](#) on the platform.

Contact our support team

+44 (0) 333 136 2483
support@irisconnect.com
www.irisconnect.com/uk/support



Serial Number